

CDJ-1000MK3 Software Update Ver. 2.00

Applicable Models: **CDJ-1000MK3 (Ver. 1.20, Ver. 1.40 and Ver.1.50)**

- ❖ System versions later than Ver. 2.00 do not require this update.
Use the following procedure to confirm the system version.

To confirm the CDJ-1000MK3 system version

1. Turn power ON.

2. Hold the RELOOP/EXIT button depressed for 10 seconds.

- The system version will appear in the display. [Display example] **MAIN Ver 1.40**
- To return the CDJ-1000MK3 to normal operation, turn the power OFF and then ON again.

Update Contents

The contents of this program update are as follows:

Improved BPM display accuracy

- **Stability of disc playback BPM display has been improved.**

Program Update Procedures

- 1. Confirm that unit power is OFF and no disc is loaded. In this condition, hold the REC MODE and RELOOP/EXIT buttons depressed simultaneously, and turn power ON.**
- 2. When "NO-DISC" appears in the display remove your fingers from the REC MODE button and RELOOP/EXIT button.**
- 3. Insert the supplied program update disc.**
 - The display will show the "DOWNLOAD-MAIN" scrolling menu.
 - Do not turn power OFF while the update process is continuing.
 - Update will be completed in about 1 minute.
 - When the update is finished, the "COMPLETE" message will appear and the program update disc will be ejected.
- 4. Remove the program update disc and turn power OFF.**

This completes the update procedure.

NOTES

- ◆ Follow the above procedure closely to perform update.
- ◆ Never not turn off or disconnect power, or remove a disc while update is in progress.
- ◆ If you have any questions regarding this procedure, consult the Pioneer service department.
- ◆ If "ROM ERROR" appears in the display, stop the operation, turn off the power, and consult the Pioneer service department.